## **Tech Tips**



## Protect your floors & cabinets from leaks!



## How to Install the Leak Block Sensor with Auto Shut-off (CR-LBS10JG):

- Install the 3/8" fittings to the solenoid valve inlet and outlet ends. The thread of solenoid valve is 1/2" BSP male. Then connect a 3/8" OD tube from the angle stop to the inlet fitting on the solenoid valve (indicated by position of the arrow). Then connect a 3/8" OD tube from the outlet end of the solenoid to the water treatment system that is feeding your Crysalli CP2000 unit.
- Put the 9V battery in the control unit and activate it by holding the check/reset button for 4 seconds (see operation instructions for more details).
- 3. Place the control unit next to your Crysalli unit, ideally between the filter system and chiller.
- 4. Turn on water and check for leaks at your connection points.

\*Can be used with any Crysalli chiller system

More about the CR-LBS10JG







