

Project:



Scan for more info!
Owners manual
Quick install
Quick sizing
Install layout
Parts list

## **Bottle Filling Station**

Portion Control and Manual Fill



# For use with: sparkling, chilled still, and ambient water

- ☐ BFS-V1-PCTM Single product, one manual fill and one portion control button
- □ BFS-V2-PCTM Two product, two manual fill and two portion control buttons
- BFS-V3-PCTM Three product, three manual fill and three portion control buttons






BFS-V1-PCTM

BFS-V3-PCTM

## **Specifications**

- Up to six buttons with three products
- Portion control and manual fill dispensing per valve
- · Counter mount or wall mount capability
- Durable met led lined buttons
- LED down light illuminates when dispensing
- Insertable and removeable drain pan
- Faucet flow rate: 1.5-2 oz per second
- Width: 12"Depth: 7"Height: 20"Clearance: 13"
- For use and pairing with all Crysalli Remote Chillers
- · Weight: 11 lbs

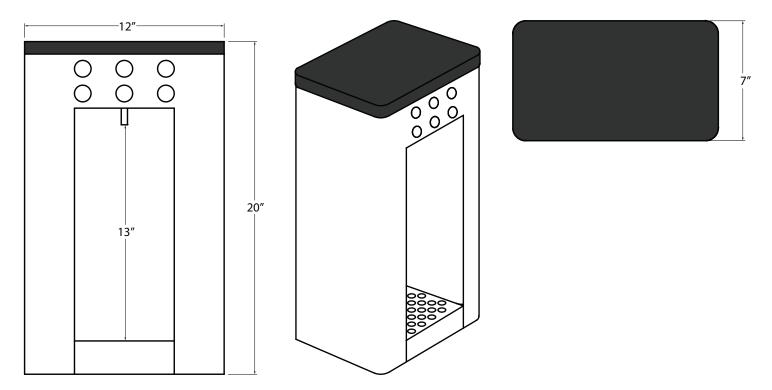

\*Shown above is the line drawing for the BFS-V3-PCTM. The BFS-V1-PCTM and BFS-V2-PCTM are the same dimensions and clearances, button configuration is the only difference

### For use with:

#### □ CR-UCW-BH

Remote Chiller unit 50 ltr per hr @<40° Up to 30ft max trunk line run Still & Sparkling



#### □ CR-KIT-UCM

Installation Kit for Remote Chiller Units, UCM1 & UCM2, Include: 5ft of CR-4L38 trunkline, various fittings and oetiker clamps, extra tubing and insulation to install the filter system, CR-UCM# and CBR or CM tower



#### □ CR-UCM1

Remote Chiller unit 50 ltr per hr @<40° Up to 30ft max trunk line run Still & Sparkling



#### □ CR-UCM2

Remote Chiller unit 80 ltr per hr @<40° Up to 40ft max trunk line run Still & Sparkling



